

TXV SUPERHEAT ADJUSTMENT							
Valve Family	"Total Turns"	Degrees of SH Per Turn					
		R-22		R-134a	R-404A/507		R-410A
		+20°F	-20°F	+20°F	+20°F	-20°F	+40°F
A	8	3.0	5.0	4.5	2.0	4.0	2.0
C/NXT	12	-	-	-	-	-	4.0
HF	10	2.2	4.2	3.8	1.8	3.2	N/A
TF	10	3.0	5.0	4.5	2.0	4.0	2.0
TRAE	10	2.2	4.2	3.8	1.8	3.2	N/A
TCLE	32	0.8	1.5	1.0	0.5	1.0	N/A

Turn adjustment clockwise to increase superheat, counter-clockwise to decrease superheat. To return to approximate original factory setting, turn adjustment stem counterclock-wise until the spring is completely unloaded (reaches stop or starts to "ratchet"). Then, turn it back in one half of the "Total Turns" shown on the chart.